


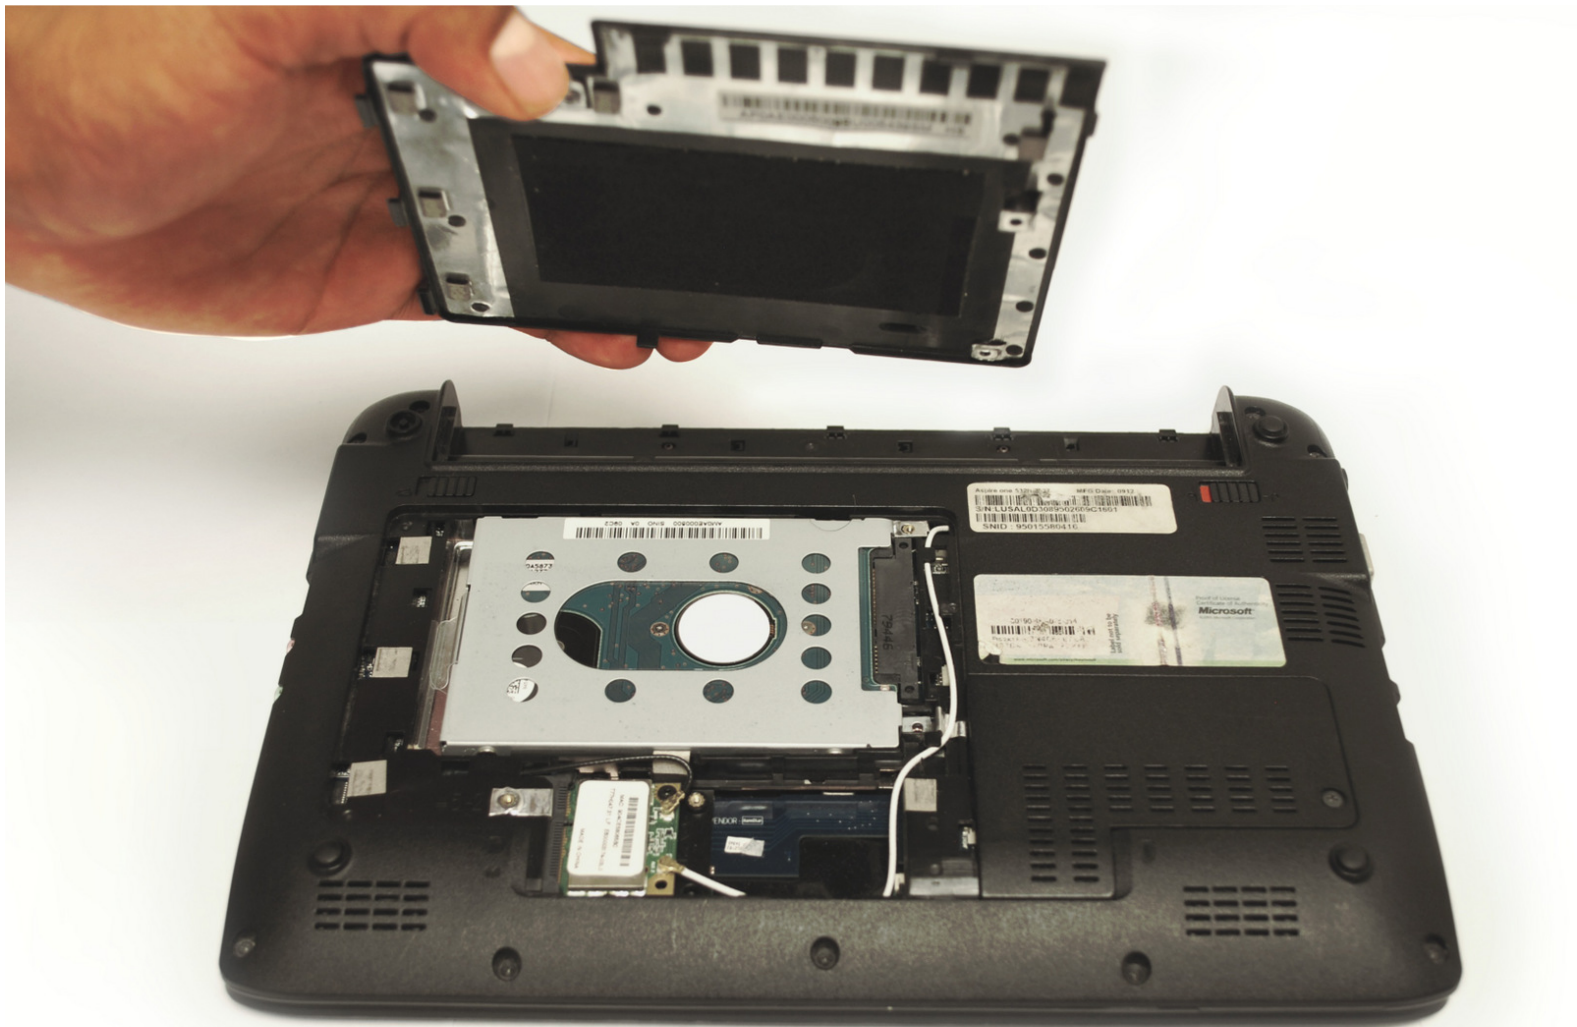

Acer Aspire One 532h-2527 Back Plate Replacement

This guide will show how to remove the large back plate for the Acer Aspire One 532h-2527.

Written By: Jair Burgos



INTRODUCTION

This guide will show how to remove the back plate on your netbook. The removal of the plate is necessary to reach a majority of your netbook's internal components.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Press the power button to turn off the netbook.

Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

Step 4



- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

Step 5 — Back Plate




- Use a #0 Phillips screwdriver to remove the three 6mm screws from the larger back plate.

Step 6



- Use the plastic opening tool on the recessed notch at the bottom of the larger plate to gently lift the plate.

Step 7

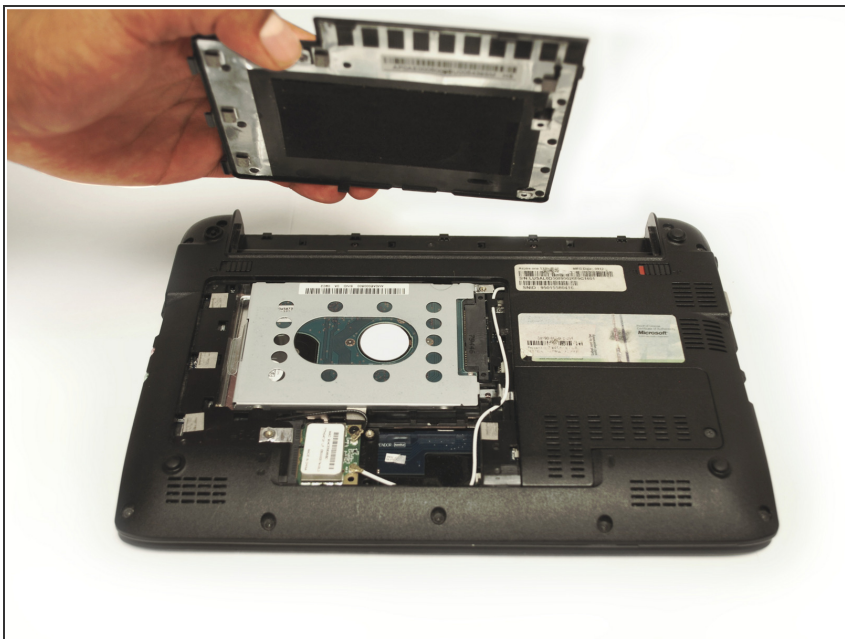

- Once the plate becomes unhinged, gently rotate the plate to take it off of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 07:00:33 AM.